


Techsense™ Fingerprint Lock User Manual

E6092

Important:

1. Default master code is “11111111”. Please modify it immediately after installation.
2. System resetting will erase all the fingerprint users and password users. It will restore the master code to the default value.
3. To activate the lock, slide up the front cover and expose the sensor and keypad, blue light in the sensor indicates active status. System goes back to “**sleeping mode**” after 5 seconds if there is no operation. Close and open the front cover to activate the system.
4. System sound indication
 - I. Dee- (Short): Keypad pressed
 - II. Dee— (Long): Operation succeeds
 - III. Dee- Dee- Dee-: Operation fails
 - IV. Dee- Dee- Dee- Dee-: Low battery

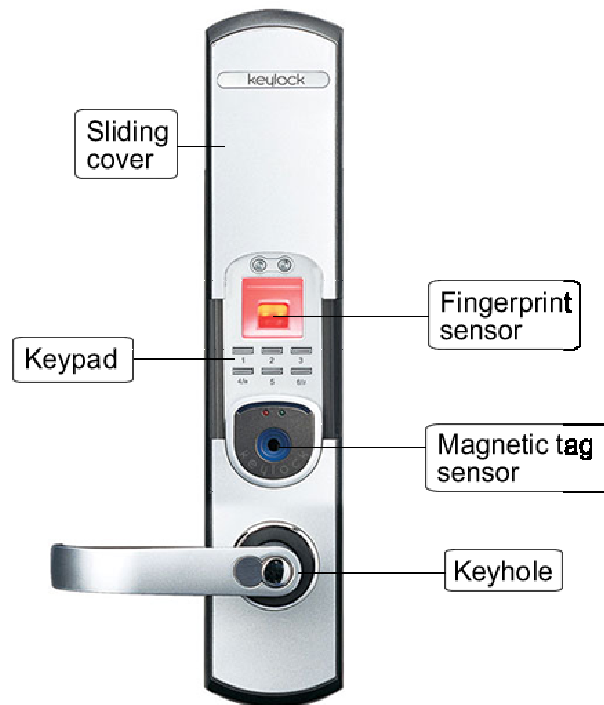

Functions

Unlocking

1. Using Fingerprint: lift up the front cover to expose the fingerprint sensor, press the registered finger against fingerprint sensor with normal pressure. Rotate the handle upon successful verification.
2. Using Password: lift up the front cover to expose the keypad, key in 8-digit registered password. Rotate the handle upon successful verification.

3. Using magnetic tag: Press the button on the magnetic sensor and place the key tag close to the sensor when the red light starts blinking. Rotate the handle upon successful verification.

Add user

A. Password user

Press '1' + '*' + master code + 3-digit user ID + user password + user password + '#'

B. Fingerprint user without user ID

I. Press '1' + '#' + master code + '#'

II. Press finger against the sensor with normal pressure

C. Fingerprint user with User ID (if a user's fingerprint may be deleted in future, please enroll his or her fingerprint with a User ID)

I. Press '1' + '#' + master code + 3-digit user ID + '#'

II. Press finger against the sensor with normal pressure

D. Magnetic tag

I. Press the button on the magnetic sensor and place the "Master Tag" close to the sensor when the red light starts blinking.

II. Place the "Key Tag" close to the sensor when red and green light blinking alternatively.
The enrollment is done!

***User-friendly tips:** For users who have dry or peeling fingers, it is suggested to apply more pressure during enrollment. This is for the purpose of better recognition during usage.*

Delete user

A. Delete password user by user ID

Press '2' + '*' + master code + 3-digit user ID + 3-digit user ID + '#'

B. Delete all password users

Press '3' + '*' + master code + '#'

C. Delete fingerprint user by user ID

Press '2' + '#' + master code + '3-digit user ID' + '3-digit user ID' + '#'

D. Delete all fingerprint users

Press '3' + '#' + master code + '#'

E. Magnetic tag

Press the button on the magnetic sensor and place the "Master Tag" close to the sensor when the red light starts blinking. Hold until the fifth beeping sound.

Passage mode

Under passage mode, the lock will be unlocked once the front cover was lift up. Make sure it is disable when there is nobody in the house.

A. Enable passage mode: Press '*' + '*' + master code + '#'

B. Disable passage mode: Press '*' + '*' + master code + '#'

Modify password (Including master code)

Press '0' + '*' + old password + new password + new password + '#'

Password can only contain numerical numbers, no '#' or '*' allowed

Master reset

I. Open the back cover and remove a battery

II. Press the button '1' and '2' on the keypad and hold

III. Put back battery and hold button '1' and '2' for 10 seconds, a long 'Dee---' sound is the indication of successful master reset