


## TECHSENSE™ Fingerprint Lock User Manual

E6097B

### Important:

1. Default master code is “11111111”. Please modify it immediately after installation.
2. System resetting will erase all the fingerprint users and password users. It will restore the master code to the default value.
3. To activate the lock, flip the cover on top and expose the fingerprint sensor and keypad, blue light in the sensor indicates active status. System goes back to “**sleeping mode**” after 5 seconds if there is no operation. Close and open the cover to activate the system.
4. System will turn into “**Protection mode**” after one operation. In this mode, users are not able to operate the system. Users can use the follow 2 methods to activate the system.
  - I. Close and open the cover to activate
  - II. Or press “#” key 3 times until the blue light resume.
5. System sound indication
  - I. Dee- (Short): Keypad pressed
  - II. Dee— (Long): Operation succeeds
  - III. Dee- Dee- Dee-: Operation fails
  - IV. Dee- Dee- Dee- Dee-: Low battery

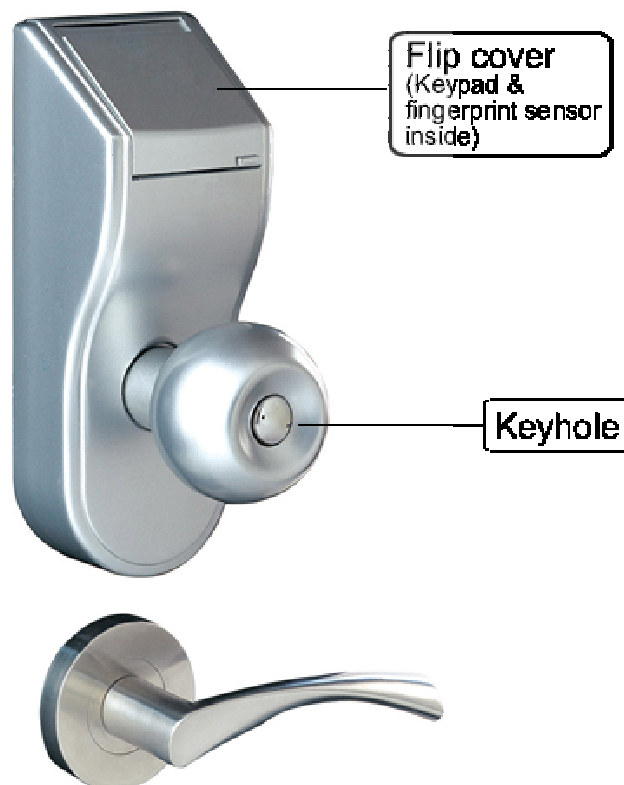

-----E6097B-----

## Functions

### Unlocking

1. Using Fingerprint: Flip the cover on top to expose the fingerprint sensor, press the registered finger against fingerprint sensor with normal pressure. Rotate the handle upon successful verification.
2. Using Password: Flip the cover on top to expose the keypad, key in 8-digit registered password Rotate the handle upon successful verification.

### Add user

- A. Password user  
Press '1' + '\*' + master code + 3-digit user ID + user password + user password + '#'
- B. Fingerprint user without user ID
  - I. Press '1' + '#' + master code + '#'
  - II. Press finger against the sensor with normal pressure
- C. Fingerprint user with User ID (if a user's fingerprint may be deleted in future, please enroll his or her fingerprint with a User ID)
  - I. Press '1' + '#' + master code + 3-digit user ID + '#'
  - II. Press finger against the sensor with normal pressure

### Delete user

- A. Delete password user by user ID  
Press '2' + '\*' + master code + 3-digit user ID+ 3-digit user ID + '#'
- B. Delete all password users  
Press '3' + '\*' + master code + '#'
- C. Delete fingerprint user by user ID  
Press '2' + '#' + master code + '3-digit user ID' + '3-digit user ID' + '#'
- D. Delete all fingerprint users  
Press '3' + '#' + master code + '#'

*User-friendly tips: For users who have dry or peeling fingers, it is suggested to apply more pressure during enrollment. This is for the purpose of better recognition during usage.*

### Passage mode

Under passage mode, the lock will be unlocked once the front cover was lift up. Make sure it is disable when there is nobody in the house.

- A. Enable passage mode: Press '\*' + '\*' + master code + '#'
- B. Disable passage mode: Press '\*' + '\*' + master code + '#'

### Modify password (Including master code)

Press '0' + '\*' + old password + new password + new password + '#'

***Password can only contain numerical numbers, no '#' or '\*' allowed***

### Master reset

- I. Open the back cover and remove a battery
- II. Press the button '1' and '2' on the keypad and hold
- III. Put back battery and hold button '1' and '2' for 10 seconds, a long 'Dee---' sound is the indication of successful master reset